

Certificate

Inspector: \_\_\_\_\_

QC: \_\_\_\_\_

Material code

P/N:17.0303.0384-00A0

User Manual

Safety Instructions

Please observe the following instructions to ensure safety use:

1. DO NOT attempt to replace the internal battery with anything other than authorized replacement battery by yourself.

2. DO NOT operate in wet conditions, let unit dry completely before using.

3. Ensure proper ventilation while in use and do not obstruct fan openings on use. Inadequate ventilation may cause damage to the power station.

4. DO NOT stack anything on top of the power station in storage or in use, vibration and impact may lead to poor connection to hardware inside.

5. DO NOT insert foreign objects into outputs or ventilation holes.

6. DO NOT place the power station near heat sources like furnace or ambient heater.

7. The power station generates the same potentially lethal AC power as household wall outlet, please take carefully and keep children away from it.

User Manual

General Specs

AC Total Power	Typical Capacity	Battery Type	Net Weight	Dimensions	Operating Temperature	Storage Temperature	Charging Temperature	Charge Temperature
700W (1740W Surge)	7100mAh	LiFePO4	4.5kg (9.92lb)	205x120x100mm (8.1x4.7x3.9in)	0~40°C (32~104°F)	-20~60°C (-4~140°F)	10~40°C (50~104°F)	-10~55°C (14~131°F)

Output Specs

AC	USB-C	USB-A	Cigarette Lighter	5521	5521	5521	5521	5521
1000W (2000W Surge)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)

Input Specs

AC	USB-C	USB-A	Cigarette Lighter	5521	5521	5521	5521	5521
1000W (2000W Surge)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)	5521W (11.04A)

Common Loads

Smart Phone	LED Light Bulb	Television	Electric Tools	Refrigerator	Slow Cooker
Around 10-15 mins	Around 30-60 mins	Around 7-8 mins	Around 2-3 mins	Around 5-7 mins	Around 2-3 hrs

716Wh Portable Power Station

User Manual

Please read this manual before use and follow its guidance. Keep this manual for future reference.

User Manual

QUICK GUIDE

1. Charging Port

2. LCD Screen

3. AC Power Button

4. US AC output x 5 pcs (EU/UK AC output x 3pcs)

5. Wireless Charging Pad x 1pcs

6. DC Power Button

7. USB-C Port x 2pcs

8. USB-A Port x 2pcs

9. DC 5521 Output Port x 2pcs

10. Cigarette Lighter Port x 1pcs

11. LED Lamp Button

12. LED Lamp

User Manual

Solar Charging

Charging Port

Charging Plug (7909)

Connecting Cable PV+

Connecting Cable PV-

Solar Panel Female Pole

MC4 Connectors

Power Station

Solar Panel

User Manual

LCD SCREEN GUIDE

ECO Mode: Turn off the split while the power of AC output is less than 10W in 4 hours for power saving.

How to operate on power station to turn ON/OFF ECO Mode and change the working frequency.

1. To Enter Settings Mode: Turn "AC" mode to the off position. Press "AC" and "DC" buttons at same time for 2 seconds to enter "Settings" mode.

2. To Change Frequency Setting: Once in "Settings" mode, press the "AC" button to switch frequency of the AC output ports to either 50 or 60 Hz depending on your location.

3. Eco Mode: Once in "Settings" mode, press the "DC" button to turn ON / OFF the ECO mode.

4. Exit Settings Mode: Long press the "AC" and "DC" buttons at the same time for 2 seconds to save and exit the settings mode.

What's In The Box

Power Station

AC/DC Adapter

Cat Charging Cable

Auto-Charging Cable

User Manual

Warranty Card

User Manual

FREQUENTLY ASKED QUESTIONS

1. How do I clean for power station?

2. How to store my power station?

3. How do I know whether my device will work with the power station?

4. How to claim the warranty?